



11601 Maple Ridge Rd, Medina, NY, 14103
 P 800.528.1398 F 585.798.8889
 www.takeform.net

Materials/Tools Required:

Rubber Gloves
 Rubber Block Eraser

Recommended Cleaning Materials:

Lint Free Cloth or Wipes
 Fantastik® All-Purpose Cleaner


Caution:

Once screen is fully assembled at final location, to prevent damage to components it will be necessary to disassemble connectors from mating screens if relocating screen to another area.


K74 - Adjoin 3-Sided Screen Assembly

Step 1:
 Lay out the screen components:

- Center Panel(s) (notches on both sides)
- Wing Panels (notches on one side)
- Connectors
- Feet

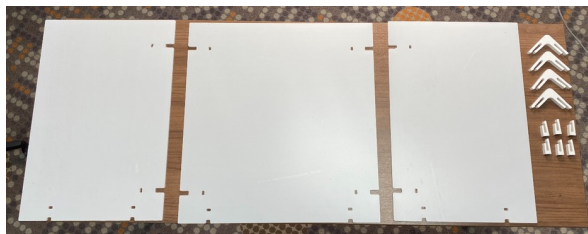

Step 2:
 All panels are covered with a protective liner (liner may be blue, tan, white or translucent). To avoid fingerprints and/or scratching, it is helpful to leave the liner in place until assembly is complete. Peel the liner such that it exposes the notches at the edges of the panel. Use the rubber eraser to start the removal.

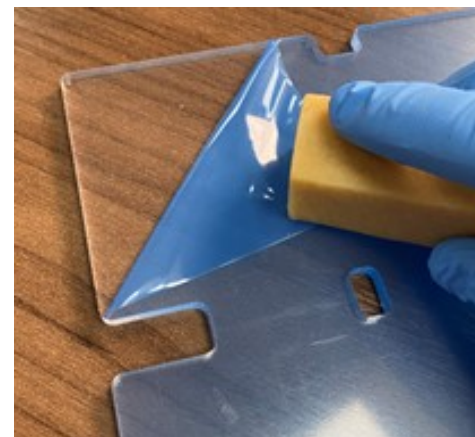

Step 3:
 With center panel face down, slide the connectors into the notch. Start at an angle, then lever the connector over the edge until it slides in place and locks.



Step 4:
 With center panel still face down, install the wing panel by levering into the connectors as shown below. Repeat for other wing panel.



Step 5:
 Continuing with screen face down, assemble locking feet using the same levering technique used for connectors.





Materials/Tools Required:

Rubber Gloves
Rubber Block Eraser

Recommended Cleaning Materials:

Lint Free Cloth or Wipes
Fantastik® All-Purpose Cleaner

Caution:

Once screen is fully assembled at final location, to prevent damage to components it will be necessary to disassemble connectors from mating screens if relocating screen to another area.

K74 - Adjoin 3-Sided Screen Assembly

Step 6:

Place the assembled screen in upright position and completely remove the protective liners.



Step 7:

If necessary, remove fingerprints and/or debris using recommended cleaning materials.

