



K24 - Sanitizer Stations—Canister Holder

K24 Hardware Kit Includes:

- #10-24 Drywall Toggle (2) 900-01024
- #10-24x1.5" Machine Screw (2) 900-1172446
- #10 Wall Anchor (2) 900-01028
- #10x1.5" Sheet Metal Screw (2) 900-1172936
- Label for hard surfaces (1) 100-LABEL02-HC1W
- Label for sanitizer (1) 100-LABEL03-HC1W

Materials/Tools Required:

- Level/Pencil/Tape Measure
- Hammer
- Drill with 1/16" bit, 7/32" bit or 1/2" bit
- Phillips Head bit


Recommended Cleaning Materials:

- Lint Free Cloth or Wipes
- Fantastik® All-Purpose Heavy Duty Cleaner


Location Requirements:

Mount 44" from floor to top of canister holder, for ADA compliance conforming to ANSI A117.1 Section 308.2 and 309.


Step 4:
 Attach Sanitizer Station canister holder to wall using #10 flat head screws (machine screws if using drywall toggles, sheet metal screws if using wall anchors).

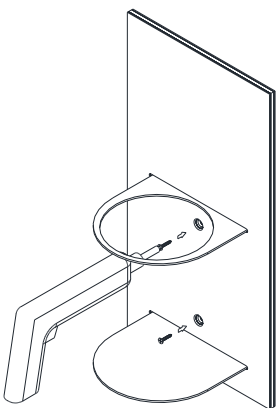

Step 5:
 Insert canister. (accessories are not supplied).

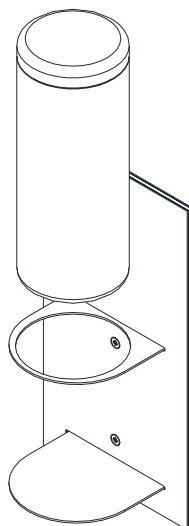

Step 1:
 Position 44" from the floor to the top of the canister holder.

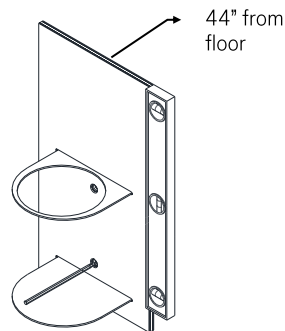


Check for level.


Mark hole locations in canister holder backer on the wall with a pencil.

Step 2:
 At hole center marks, drill holes using method A or B, depending on wall conditions as noted below:

- A. For concrete/masonry installation, the recommended mounting hardware is a wall anchor. Drill 7/32" diameter holes. Install anchors per Step 3a.
- B. For drywall installation, the recommended mounting hardware is a drywall toggle. Drill 1/2" diameter holes and deburr them. Insert toggles per Step 3b.

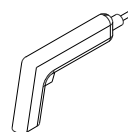


Step 3a: Wall Anchors
 Drive anchors into masonry wall and seat flush. Proceed to Step 4.

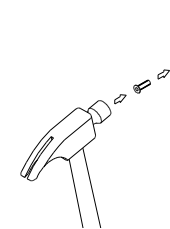

Step 3b: Drywall Toggles


Insert toggles into holes. Cinch retaining ring until tight against wall and seated in each hole. Break off excess plastic. Proceed to Step 4.

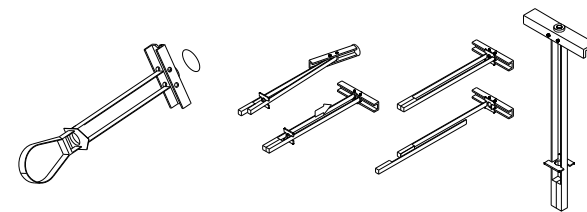

Step 6:
 Select correct label based on product canister. Two labels have been included:

- A. One for use with sanitizer wipes for hands and skin.
- B. One for use with disinfectant wipes for surfaces.

Remove release liner and adhere label to canister backer.

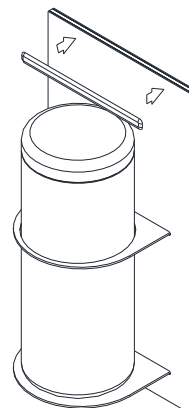

Step 7:
 Remove finger prints using recommended cleaning materials.

