



K24 Hardware Kit Includes:

- #10-24 Drywall Toggle (2) 900-01024
- #10-24x1.5" Machine Screw (2) 900-1172446
- #10 Wall Anchor (2) 900-01028
- #10x1.5" Sheet Metal Screw (2) 900-1172936
- Label for hard surfaces (1) 100-LABEL02-HC1W
- Label for sanitizer (1) 100-LABEL03-HC1W

Materials/Tools Required:

- Level/Pencil/Tape Measure
- Hammer
- Drill with 1/16" bit, 7/32" bit or 1/2" bit
- Phillips Head bit

Recommended Cleaning Materials:

- Lint Free Cloth or Wipes
- Fantastik® All-Purpose Heavy Duty Cleaner

Location Requirements:

Mount 44" from floor to top of canister holder, for ADA compliance conforming to ANSI A117.1 Section 308.2 and 309.


K24 - PURIFY—Canister Holder

Step 1:

Position 44" from the floor to the top of the canister holder.

Check for level.


Mark hole locations in canister holder backer on the wall with a pencil.

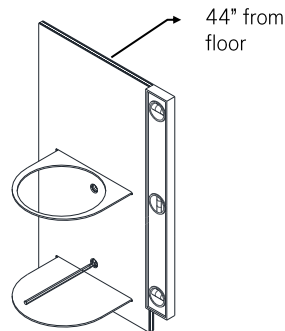

Step 2:


At hole center marks, drill holes using method A or B, depending on wall conditions as noted below:

- A. For concrete/masonry installation, the recommended mounting hardware is a wall anchor. Drill 7/32" diameter holes. Install anchors per Step 3a.
- B. For drywall installation, the recommended mounting hardware is a drywall toggle. Drill 1/2" diameter holes and deburr them. Insert toggles per Step 3b.

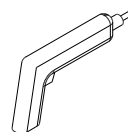


Step 3a: Wall Anchors

Drive anchors into masonry wall and seat flush. Proceed to Step 4.

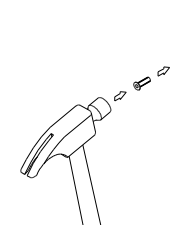


Step 3b: Drywall Toggles

Insert toggles into holes. Cinch retaining ring until tight against wall and seated in each hole. Break off excess plastic. Proceed to Step 4.

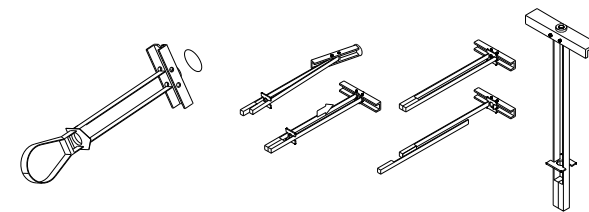


Step 4:

Attach Purify canister holder to wall using #10 flat head screws (machine screws if using drywall toggles, sheet metal screws if using wall anchors).

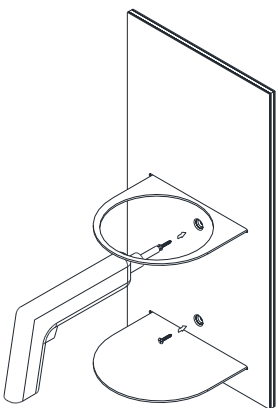

Step 5:

Insert canister. (accessories are not supplied).

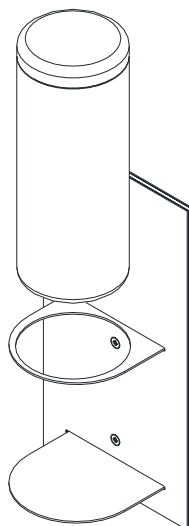


Step 6:

Select correct label based on product canister. Two labels have been included:

- A. One for use with sanitizer wipes for hands and skin.
- B. One for use with disinfectant wipes for surfaces.

Remove release liner and adhere label to canister backer.

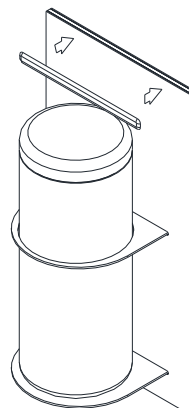

Step 7:

Remove finger prints using recommended cleaning materials.

