



**K10-2A - Ceiling Flag Mount with 2 Brackets**

**K10-2 Hardware Kit Includes:**

- #10-24 Drywall Toggle (2) 900-01024
- #10-24x2.5" Machine Screw (2) 900-110170359
- #10 Wall Anchor (2) 900-01028
- #10x1.5" Sheet Metal Screw (2) 900-1172936
- #10 Flat Washer (4) 900-01075
- #10-24 Hex Nut (4) 900-01074
- 5/64" Hex Key (1) 900-01030
- Perforated Steel Angle (1) 900-010040

**Materials/Tools Required:**

- Level / Pencil / Hammer / Tape Measure
- Drill with 1/16" bit, 7/32" bit or 1/2" bit (see Step 4)
- Phillips Head bit
- Stud Finder

**Recommended Cleaning Materials:**

- Lint Free Cloth or Wipes
- Novus® 1 Plastic Cleaner and Polish

**Location Requirements:**


Mount a minimum of 80" from floor to bottom of sign.

**Step 1:**  
 Use these instructions for signs 22" or longer in length, utilizing two brackets.


Use stud finder to locate ceiling joist.

**Note:** Attaching sign to a joist is preferable. Refer to Step 5 for applicable install mounting methods.

**Step 2:**  
 Check that bottom of sign is a minimum of 80" from floor. Mark outline of C-brackets.

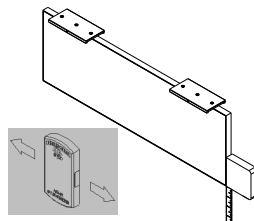


**Step 3:**  
 Remove and position C-brackets on ceiling. Check that brackets are square. Mark location of center hole on each bracket with pencil.

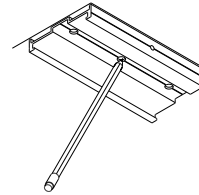


**Step 4:**  
 Drill marked holes.

If installing on joist use 1/16" bit and proceed to Step 5a. If using wall anchors, use 7/32" bit and proceed to Step 5b. If using drywall toggles or installing on drop ceiling, use 1/2" bit and proceed to Step 5c.


**Step 5a: Joist**  
 Using Phillips head bit, screw #10 sheet metal screws through C-brackets into joist. Proceed to Step 7.

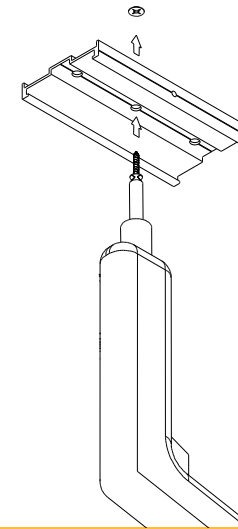

**Step 5b: Wall Anchors**  
 Drive anchors into masonry ceiling and seat flush.

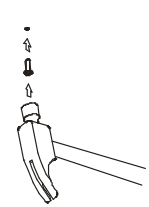


Using Phillips head bit, screw #10 sheet metal screws through C-brackets into anchors. Proceed to Step 7.

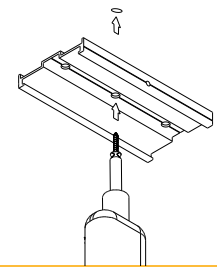


**Step 5c: Drywall Toggles**

Insert toggles into holes. Cinch retaining ring until tight against ceiling surface and seated in each hole. Break off excess plastic.

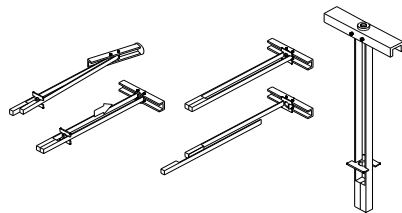


Using Phillips head bit, install #10-24 machine screws through C-brackets into toggles. If install is to a drop ceiling, continue to Step 6. Otherwise, proceed to Step 7.

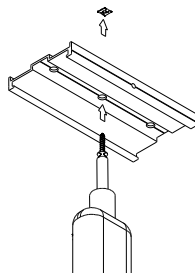


**Step 6: Drop Ceiling**

Place #10 hex nut and washer on screws and position to support perforated steel angle (even with top of ceiling channels).

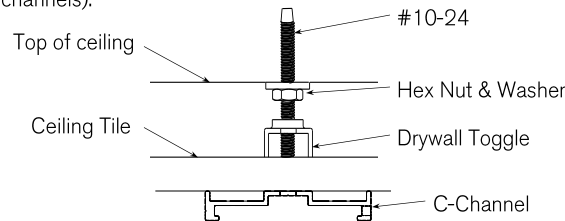

Place perforated steel angle over screws. Add final washer and nut, and hand tighten to secure. **Make sure ceiling tile does not deform when securing angle between nuts.**

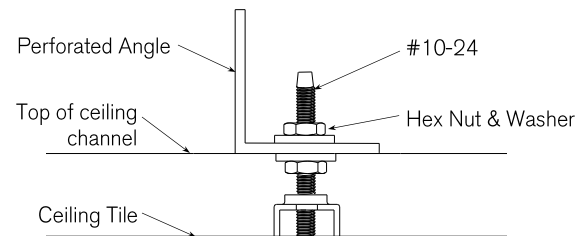

**Step 7:**  
 Slide sign into C-brackets. Tighten set screw on each bracket using hex key provided.

**Step 8:**  
 Remove finger prints from sign face and edges using recommended cleaning materials. DO NOT use ammonia or alcohol based cleaners.

