



K69

Materials/Tools Required:

Felt Tipped Squeegee, Tape Measure, Stiff-bristled Broom, Razor Knife, Lint Free Cloth

Recommended Cleaning Materials:

Mild soap and water solution

Installation Guidelines:

- Applicable surfaces: vinyl tile, ceramic tile, wood, laminates, PVC flooring, painted floors, sealed concrete
- Install ambient temperature: 50F—100F
- Installation surface must be clean and dry
- Avoid applying decal over grout lines
- A test sample to assure proper adhesion is recommended
- Prior to placing any decal, it is advisable to establish a placement convention to be adhered to project-wide. Consistent placement and position is essential if the desired aesthetic is to be achieved.
- If graphic is damaged, it must be replaced to prevent a tripping hazard.

K69 - Floor Decal - For Interior Surfaces


Step 1: Surface Preparation

Sweep the surface with a stiff-bristled broom to ensure it is clean and free of debris. If surface is greasy or unclean, a solution of two drops of dish soap in one gallon of water is recommended. Solvent and ammonia based cleansers should be avoided.

Ensure that the surface is clean and dry before applying decal.

Step 2: Remove Liner


Carefully remove liner to expose adhesive. Be sure to not let the adhesive side touch the face of the decal.

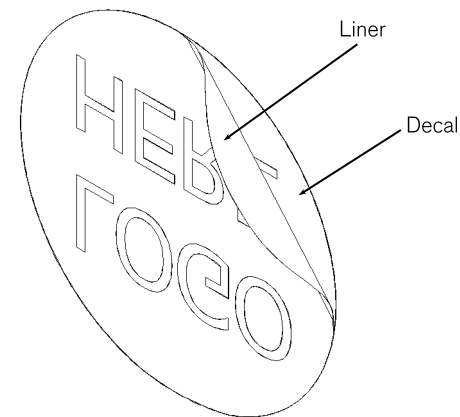

Step 3: Position and Apply


The decal may be difficult to reposition: take care to place it precisely.

Smooth decal to surface with a soft squeegee working from the center outward. Firm pressure at the corners and edges will help prevent lifting. Be sure to remove all wrinkles and air bubbles. For large graphics, remove the liner in sections. If more than one panel is used, they should be butt spliced.

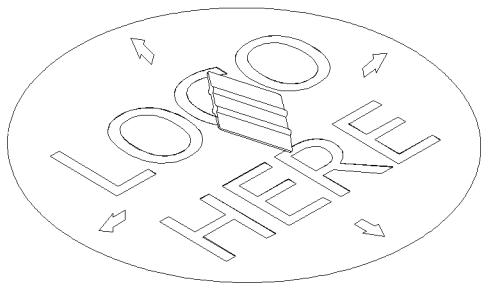

Removal:


Remove the decal by using a hard squeegee or putty knife to lift corner of the material. Pull in a 180° direction with consistent pressure. Should small amounts of adhesive remain, apply a piece of the removed material to the residual adhesive and lift.

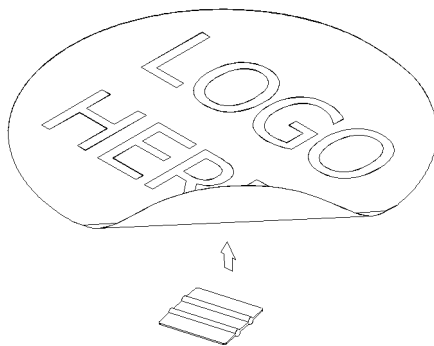

Safety:

Decals comply with UL 410 for slip resistance. Be aware that even non-slip floor products may become slippery when wet.

Note: if decal is lifting or damaged, it must be replaced to prevent a tripping hazard.

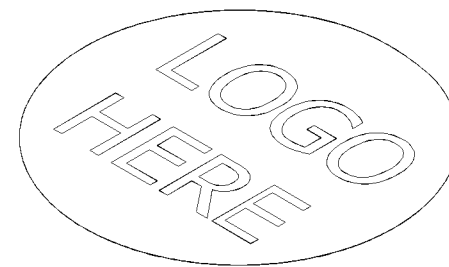



11601 Maple Ridge Rd, Medina, NY, 14103
 P 800.528.1398 F 585.798.8889
 www.takeform.net

K69

Materials/Tools Required:

Felt Tipped Squeegee, Tape Measure, Stiff-bristled Broom, Razor Knife, Lint Free Cloth

Recommended Cleaning Materials:

Mild soap and water solution

Installation Guidelines:

- Applicable surfaces: concrete, asphalt and brick with smooth to lightly textured finish
- Install ambient temperature: 50F—100F
- Installation surface must be clean and dry
- Avoid applying decal over grout lines
- A test sample to assure proper adhesion is recommended
- Prior to placing any decal, it is advisable to establish a placement convention to be adhered to project-wide. Consistent placement and position is essential if the desired aesthetic is to be achieved.
- If graphic is damaged, it must be replaced to prevent a tripping hazard.

K69 - Floor Decal - For Exterior Surfaces


Step 1: Surface Preparation

Sweep the surface with a stiff-bristled broom to ensure it is clean and free of debris. If surface is greasy or unclean, a solution of two drops of dish soap in one gallon of water is recommended. Solvent and ammonia based cleansers should be avoided.

Ensure that the surface is clean and dry before applying decal.

Step 2: Remove Liner


Carefully remove liner to expose adhesive. Be sure to not let the adhesive side touch the face of the decal.

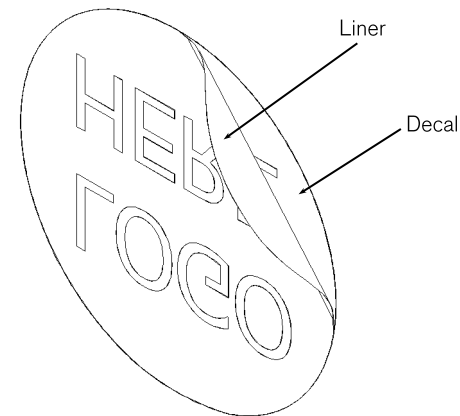

Step 3: Position and Apply


The decal may be difficult to reposition: take care to place it precisely.

Smooth decal to surface with a soft squeegee working from the center outward. Firm pressure at the corners and edges will help prevent lifting. Be sure to remove all wrinkles and air bubbles. For large graphics, remove the liner in sections. If more than one panel is used, they should be butt spliced.

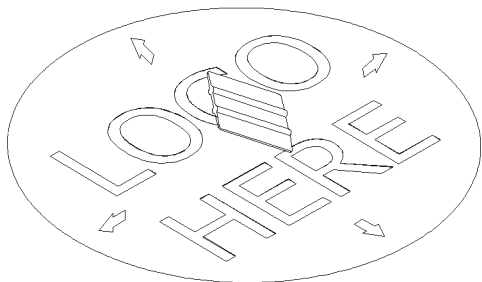

Removal:

Remove the decal by using a hard squeegee or putty knife to lift corner of the material. Pull in a 180° direction with consistent pressure. Should small amounts of adhesive remain, apply a piece of the removed material to the residual adhesive and lift.

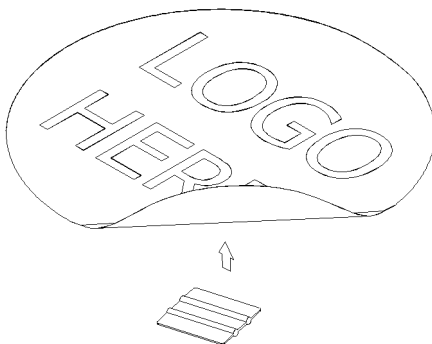

Safety:

Decals comply with UL 410 for slip resistance. Be aware that even non-slip floor products may become slippery when wet.

Note: if decal is lifting or damaged, it must be replaced to prevent a tripping hazard.

