

K03 Hardware Kit Includes:

- #10-24 Drywall Toggle (2) 900-01024
- #10-24x1.5" Machine Screw (2) 900-1172446
- #10 Wall Anchor (2) 900-01028
- #10x1.5" Sheet Metal Screw (2) 900-1172936
- 5/64" Hex Key (1) 900-01030

Materials/Tools Required:

- Level
- Pencil
- Hammer
- Tape Measure
- Drill with 1/16" bit, 7/32" bit or 1/2" bit (see Step 4)
- Phillips Head bit
- Stud Finder

Recommended Cleaning Materials:

- Lint Free Cloth or Wipes
- Novus® 1 Plastic Cleaner and Polish


Location Requirements:

Mount a minimum of 80" from floor to bottom of sign.

K03 - Wall Flag Mount Installation

Step 1:
 At desired sign location use a stud finder to locate stud (when applicable, studs are typically located right next to a door).


Note: Attaching sign to a stud is preferable. Refer to Step 5 for applicable install mounting methods.

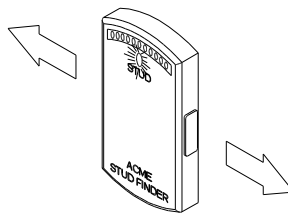

Step 2:
 Measure distance between bottom of sign and bottom of bracket. Add required 80" min. to Dim X and mark wall at the resulting height.


Note: If Dim Y is 4" or less, sign can be lower than required 80".

Verify final height with owner or architect.

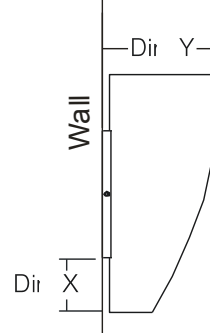


Step 3:
 Position bottom of C-bracket in location determined from Step 2. Check that bracket is level and plumb.

Using top and bottom holes in bracket as a template, mark hole locations with pencil.

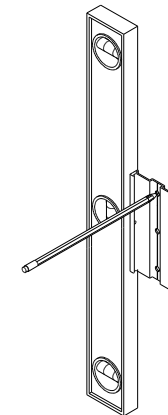


Step 4:
 Drill marked holes.


If installing on stud use 1/16" bit and proceed to Step 5a. If using wall anchors, use 7/32" bit and proceed to Step 5b. If using drywall toggles, use 1/2" bit and proceed to Step 5c.

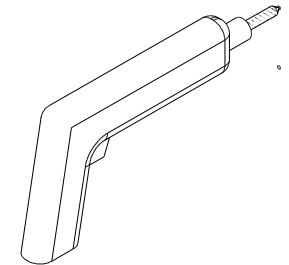


Step 5a: Stud
 Using Phillips head bit, screw #10 sheet metal screws through C-bracket into stud.

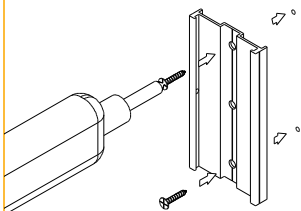


Step 5b: Wall Anchors
 Drive anchors into masonry wall and seat flush.

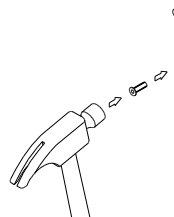


Using Phillips head bit, screw #10 sheet metal screws through C-bracket into anchors.

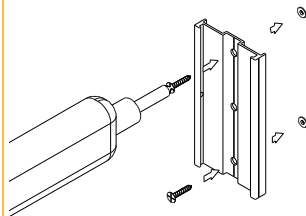

Step 5c: Drywall Toggles
 Insert toggles into holes. Cinch retaining ring until tight against wall surface and seated in each hole. Break off excess plastic.

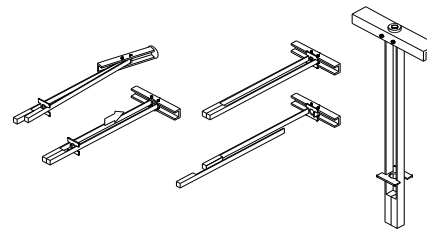

Using Phillips head bit, install #10-24 machine screws through C-bracket into toggles.

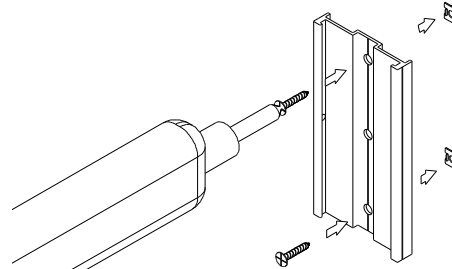

Step 6:
 Slide sign into C-bracket. Tighten set screw on bracket using hex key provided.

Step 7:
 Remove finger prints from sign face and edges using recommended cleaning materials. DO NOT use ammonia or alcohol based cleaners.

