



11601 Maple Ridge Rd, Medina, NY, 14103
 P 800.528.1398 F 585.798.8889
 www.takeform.net

K66 Hardware Kit Includes:


- Push-in Rivet, Black (2) 900-B90136A583
- Push-in Rivet, White (2) 900-W90136A583

Recommended Cleaning Materials:


- Lint Free Cloth or Wipes
- Fantastik® All-Purpose Cleaner

**K66 - Respond 1-Sided Freestanding
 Installation**


Step 1:
 Slide support panel into mating slots in legs.

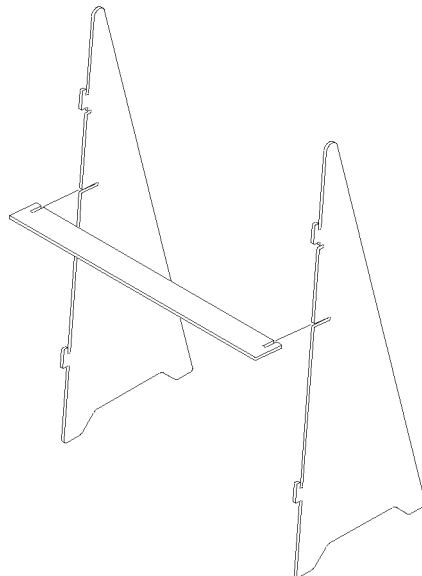

Step 2:
 Assemble face panel to legs by aligning slots in face panel with tabs on legs. Panel will bottom out on leg tabs when fully engaged.

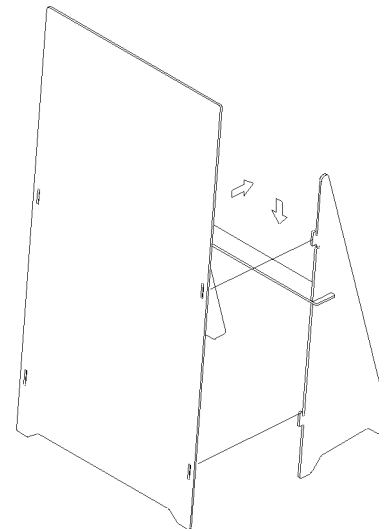

Step 3:
 Insert push-in rivets in slot in face panel below top leg tabs. Rivets lock assembly together.

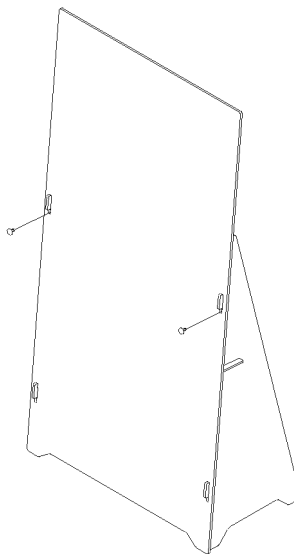

Step 4:
 Place freestanding display in final position.
 Remove finger prints using recommended cleaning materials.

