



K16 Hardware Kit Includes:
Replacement Sign Face
(includes full coverage adhesive on backside)


Materials/Tools Required:
Sharp Putty Knife

Recommended Cleaning Materials:
Lint Free Cloth or Wipes
Fantastik® All Purpose Heavy Duty Cleaner


Important Notice:
Existing sign surface must be clean and dry prior to adhering new face.

K16 - Re-facing Existing Signage


Step 1:
Locate existing sign in field. Verify location and updated message.

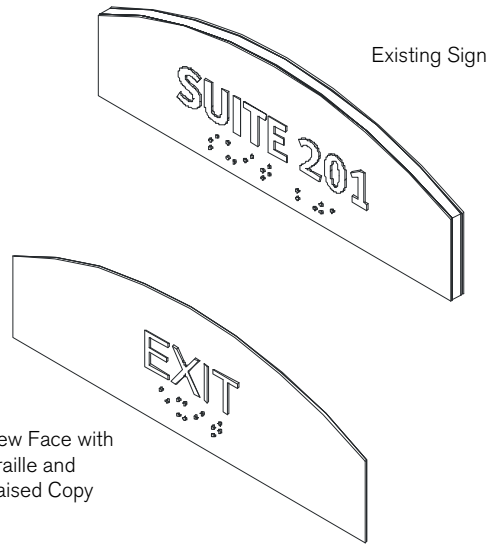


Step 2:
Remove the raised copy and braille from the existing sign.
Take a sharp putty knife and scrape off the braille and raised lettering from the sign face. All raster balls must be removed.
Be sure to remove all adhesive residue behind raised lettering.

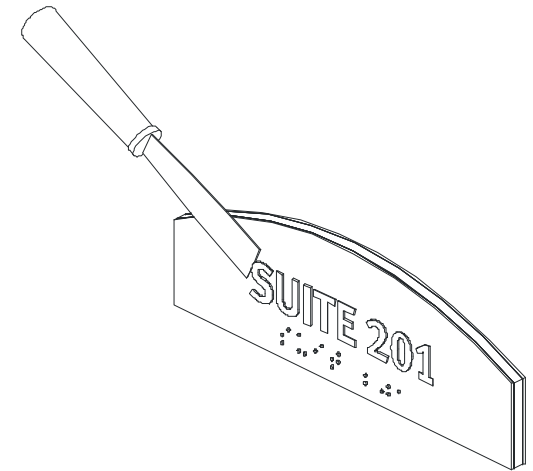

Step 3:
Clean existing sign surface with recommended cleaners. DO NOT use ammonia or alcohol based cleaners.

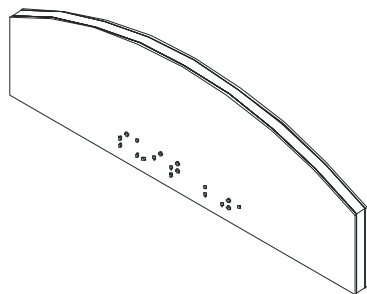

Step 4:
Remove liner from adhesive on back of replacement laminate sign.
Once laminate is in position apply pressure to adhere it.

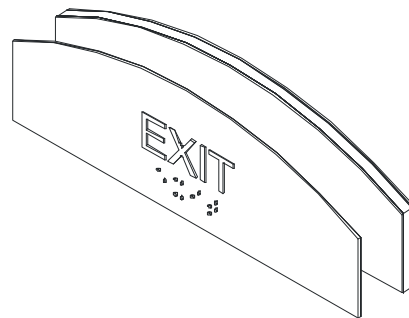

Step 5:
Remove finger prints from sign face and edges using recommended cleaning materials. DO NOT use ammonia or alcohol based cleaners.

