



**K24 - Sanitizer Stations—Canister Holder**

**K24 Hardware Kit Includes:**

- #10-24 Drywall Toggle (2) 900-01024
- #10-24x1.5" Machine Screw (2) 900-1172446
- #10 Wall Anchor (2) 900-01028
- #10x1.5" Sheet Metal Screw (2) 900-1172936

**Materials/Tools Required:**

- Level/Pencil/Tape Measure
- Hammer
- Drill with 7/32" bit or 1/2" bit
- Phillips Head bit

**Recommended Cleaning Materials:**


- Lint Free Cloth or Wipes
- Fantastik® All-Purpose Heavy Duty Cleaner

**Location Requirements:**

Mount 44" from floor to top of canister holder, for ADA compliance conforming to ANSI A117.1 Section 308.2 and 309.


**Step 4:**

Attach Sanitizer Station canister holder to wall using #10 flat head screws (machine screws if using drywall toggles, sheet metal screws if using wall anchors).

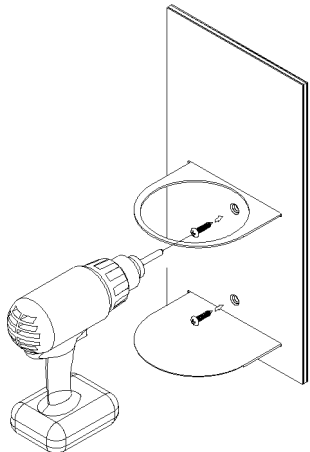

**Step 1:**

Position 44" from the floor to the top of the canister holder.

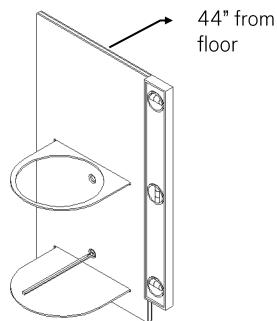

Check for level.

Mark hole locations in canister holder backer on the wall with a pencil.

**Step 2:**


At hole center marks in template, drill holes using method A or B, depending on wall conditions as noted below:

- A. For concrete/masonry installation, the recommended mounting hardware is a wall anchor. Drill 7/32" diameter holes. Install anchors per Step 3a.
- B. For drywall installation, the recommended mounting hardware is a drywall toggle. Drill 1/2" diameter holes and deburr them. Insert toggles per Step 3b.




**Step 3a: Wall Anchors**

Drive anchors into masonry wall and seat flush. Proceed to Step 4.

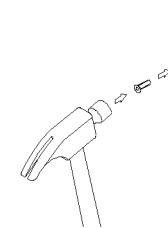


**Step 3b: Drywall Toggles**

Insert toggles into holes. Cinch retaining ring until tight against wall and seated in each hole. Break off excess plastic. Proceed to Step 4.

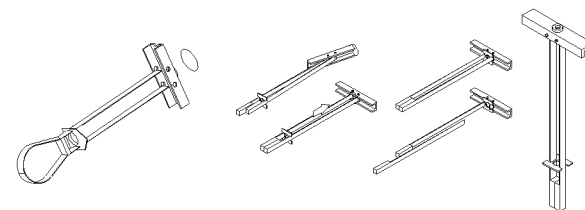


**Step 5:**

Insert canister. (accessories are not supplied).

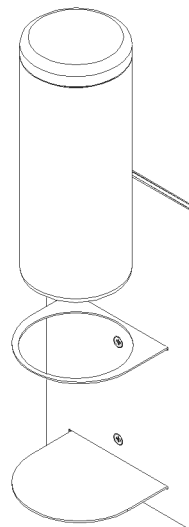

**Step 6:**

Remove finger prints using recommended cleaning materials.

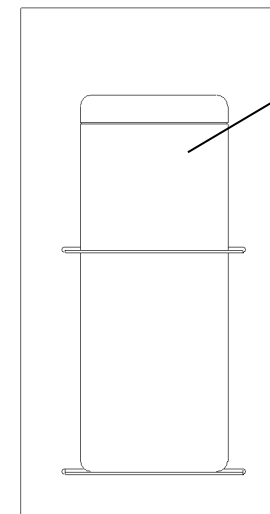

Canister (not supplied).