



K07

Materials/Tools Required:

- Level
- Pencil
- Tape Measure
- Sign Setter*
- Caulk Gun
- GE RTV 108 or RTV 6700 Clear Silicone Adhesive *
- *Available from Takeform

Recommended Cleaning Materials:

- Lint Free Cloth or Wipes
- Novus® 1 Plastic Cleaner and Polish

Important: Wall surface must be clean and dry prior to adhering signs. Allow paint to dry at least 72 hours.

Location Requirements:

See ADA mounting height requirements page.

For more information visit:

www.ada.gov/2010adastandards_index.htm


K07 - Wall Mount Installation (tape/silicone)

Step 1: Using a Sign Setter

Refer to the ADA Mounting Height page and use the Sign Setter to determine the correct mounting height and distance from the door trim.

Refer to steps 3-6 to insure adequate adhesion to mounting surface.

If not using a Sign Setter, proceed to Step 2.

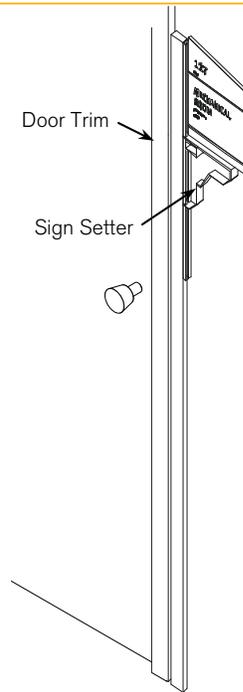


Step 2:

Refer to the ADA Mounting Height page to determine the correct mounting height and distance from the door trim.

Mark required distance from the door trim on the latch side of door.


Mark the required height on the wall from the floor to the top of the sign.

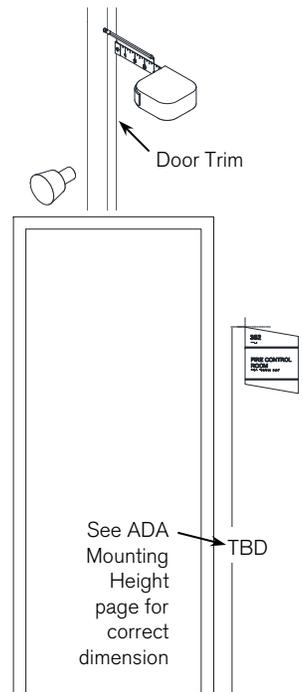

Step 3:

Apply 3-4 beads of silicone to back of sign. Silicone should be applied with a thickness greater than that of the tape squares.


Be sure silicone is applied away from the edges so silicone is not visible when pressed against wall.

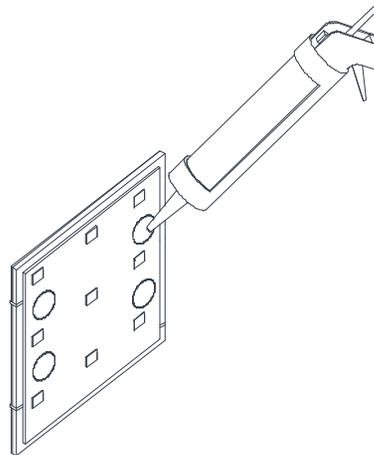

Step 4:

Place sign on wall aligning with measurement marks. Check that sign is level. Press sign firmly and evenly to wall so that all tape squares receive 15 PSI of pressure.

Note: Silicone adhesive is the primary bonding agent. The tape squares provide temporary hold until silicone adhesive cures.

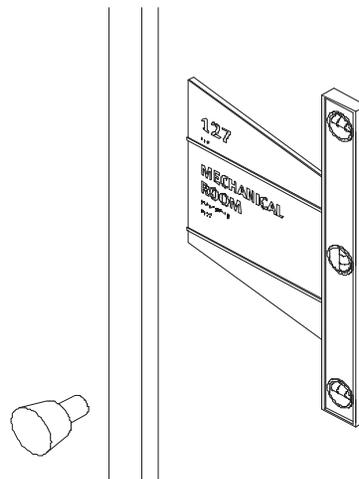

Step 5:

Remove finger prints from sign face and edges using recommended cleaning materials. DO NOT use ammonia or alcohol based cleaners.

