

K68

Materials/Tools Required:

- Felt Tipped Squeegee
- Lint Free Cloth
- Tape Measure, Razor Knife

Recommended Cleaning Materials:

Mild soap and water solution


Important Installation Guidelines:

- Wall must be flat, smooth, clean and dry.
- Applicable surfaces are painted or primed drywall, painted doors, windows/glass not exposed to direct sunlight, metal and painted metal.
- Install temperature must be 50°F to 100°F.
- Do not install onto walls with oil-based paint finish or anti-graffiti coating.
- Allow paint to dry for 30 days prior to installation to avoid outgassing of paint and bubbling of graphic.

K68 - Respond Wall Decal Peel & Stick Installation


Step 1: Surface Preparation

Wipe down wall using a dusting brush, lint free cloth or wet sponge to remove dust and debris. Allow surface to completely dry before installation.

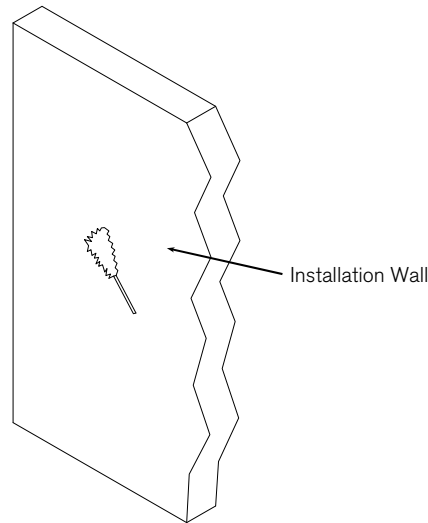

Step 2: Remove Liner

Carefully pull off paper liner from backside of decal to expose adhesive. Be sure not to let the adhesive side of the decal touch itself.

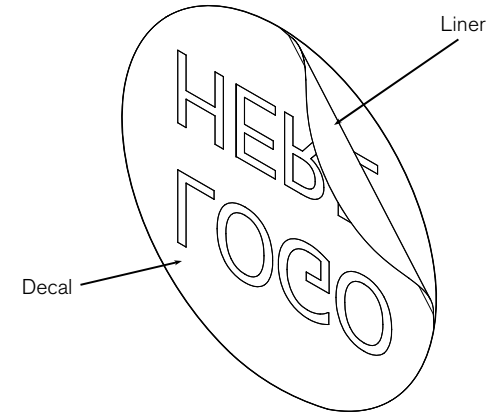

Step 3: Position and Apply

Smooth decal against wall in desired location with a squeegee, starting at the top and working from center outward as you work your way down. Be sure to remove all air bubbles and wrinkles.



Step 4: Clean Up

Clean the decal using recommended cleaner and wipe with a lint free cloth.

