

K70

**Materials/Tools Required:**

- Felt Tipped Squeegee
- Lint Free Cloth
- Tape Measure, Razor Knife

**Recommended Cleaning Materials:**

Mild soap and water solution


**Important Installation Guidelines:**

- Applicable installation surfaces are glass, acrylic, polycarbonate, metal and painted metal.
- Install temperature must be 50°F to 100°F.
- Surface with anti-graffiti coating is not acceptable for window films.

K70 - Respond Window Cling Peel & Stick Installation


**Step 1:**

Spray glass with solution and wipe with lint free cloth. Repeat until window is clean.

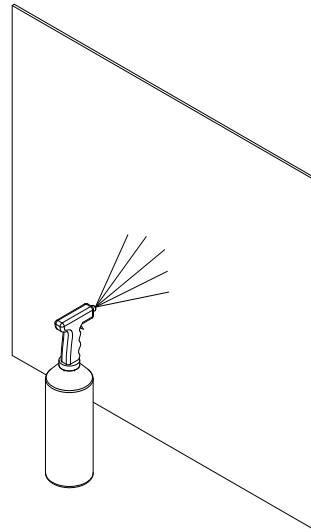

**Step 2: Remove Liner**

Carefully pull off liner to expose adhesive. Be sure not to let the adhesive side of the decal touch itself.

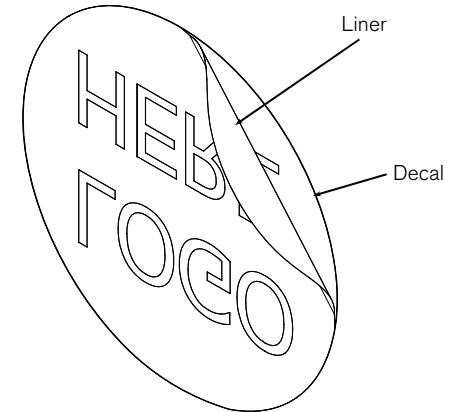

**Step 3: Position and Apply**

Smooth decal against glass in desired location with a squeegee, starting at the top and working from center outward as you work your way down. Be sure to remove all air bubbles and wrinkles.



**Step 4: Clean Up**

Clean the decal using recommended cleaners and wipe with a lint free cloth.

